


Diversion Berm

V1.0

Use DIAMOND SOCK Compost Filter Sock (CFS) to divert water flow away from or around disturbed areas and in to a catch basin, sediment trap, sediment basin or vegetative area. CFS filler material should be weighted with sand or aggregate and compost should be dense (approximately 50% passing through a 3/8" sieve).

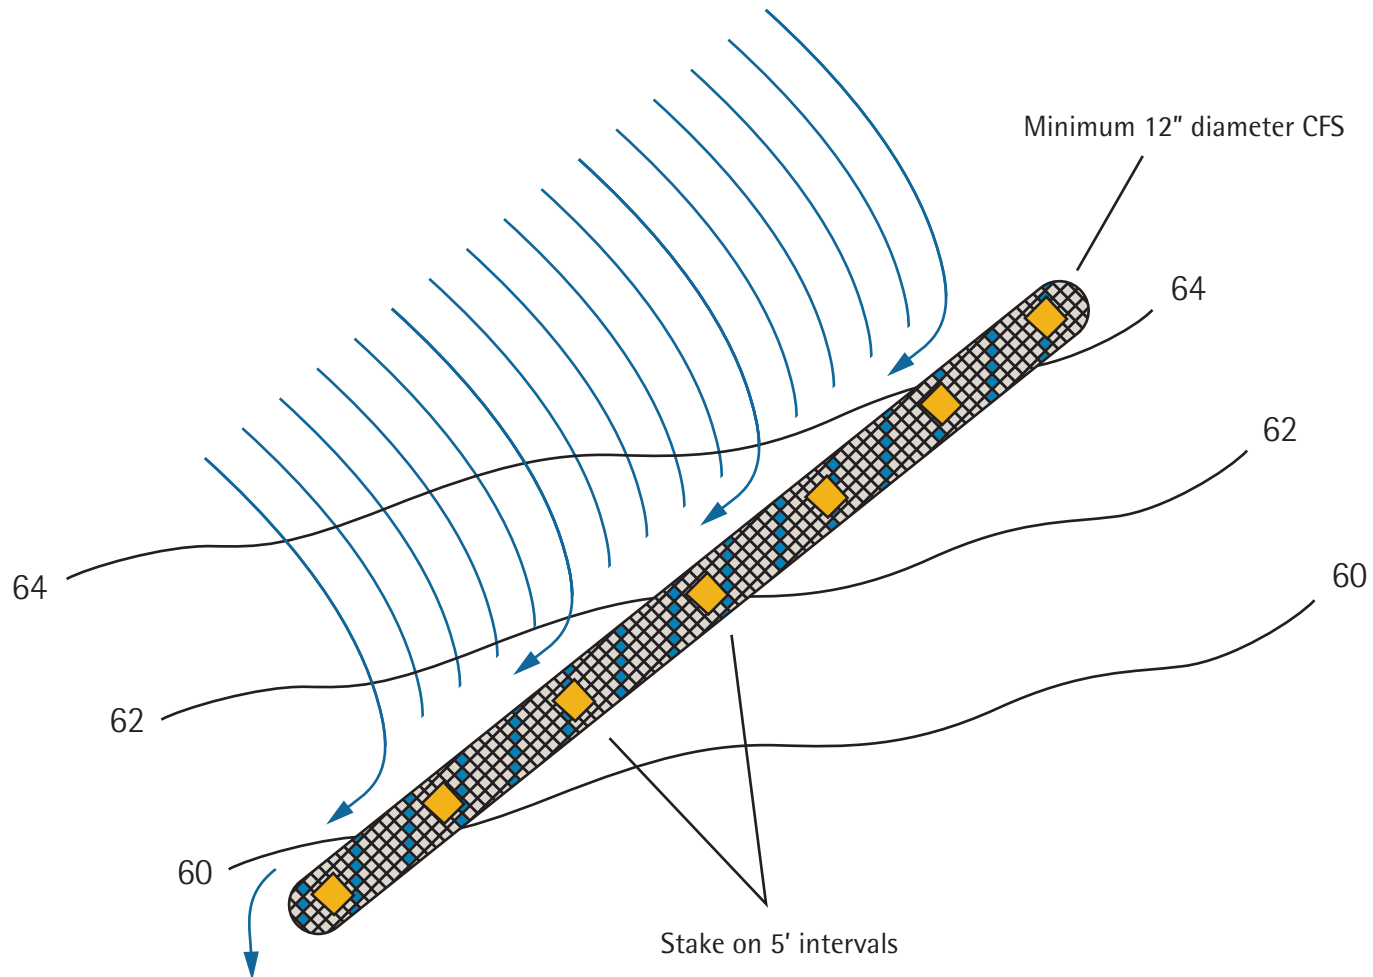

* These are DIAMOND SOCK recommended specifications. Consult your state or local regulations for further information