


# Slope Interruption

V1.0

Slope interruption reduces erosion on slopes by dissipating the energy of runoff. Install DIAMOND SOCK Compost Filter Sock (CFS) level, following the contour of new cut or fill slope. This technique is effective in preventing rills while permanent vegetation is being established.

CFS Diameter	Slope Interruption: Maximum Interval Spacing ( <i>in feet</i> )				
	2:1	3:1	5:1	10:1	25:1
8 in	30	40	75	125	200
12 in	40	50	100	150	250
18 in	50	60	125	200	300
24 in	60	70	200	300	400
32 in	70	80	300	400	500

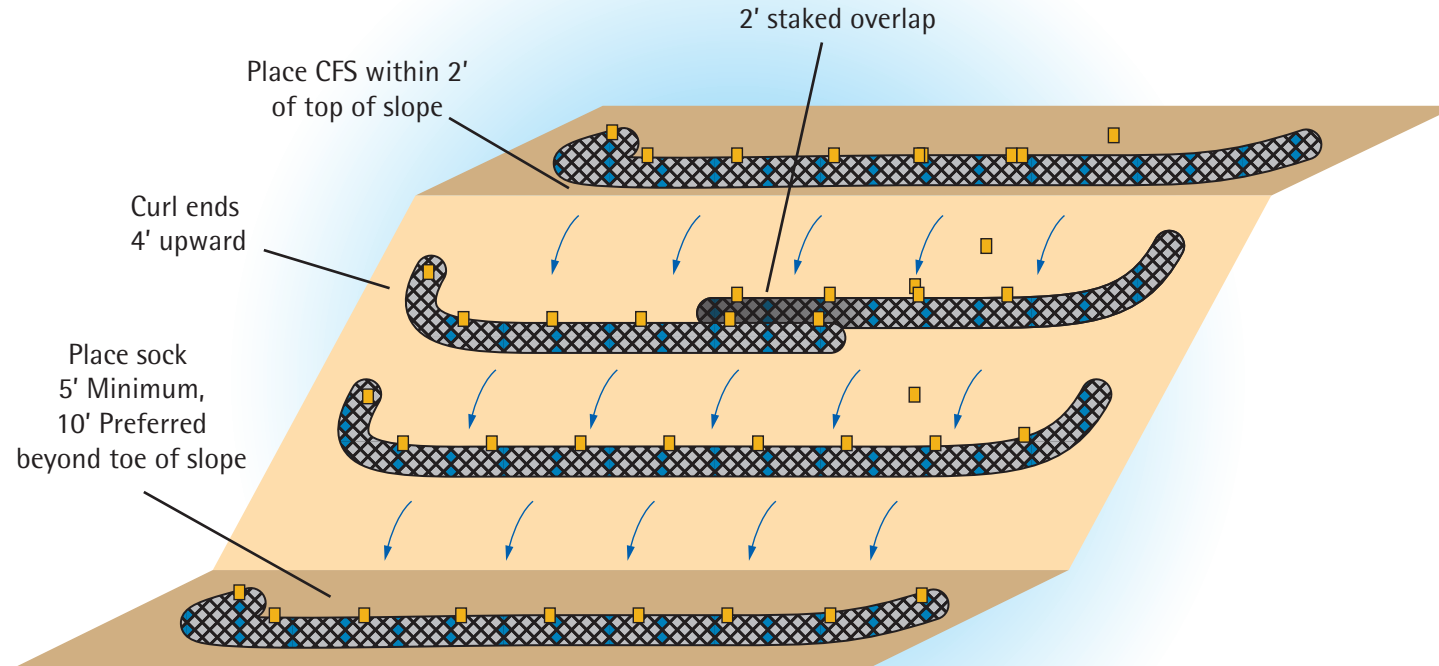

\* These are DIAMOND SOCK recommended specifications. Consult your state or local regulations for further information